



Step 1:  
Notice:bottom bracket and bottom tube face up.  
The tubes necking end face up.

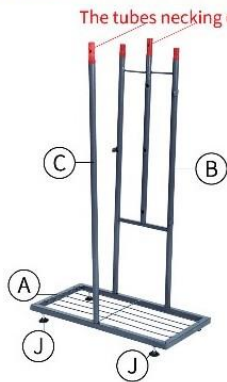

Step 4:

Tips: Put down more easily installation.

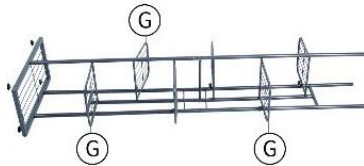


Step 2:




Step 5:

After fixing the meshes, take out the screw and lock the other side of the supporting tube.

Notice:When installing all the meshes, please lock the connecting tube, otherwise the meshes will fall off.

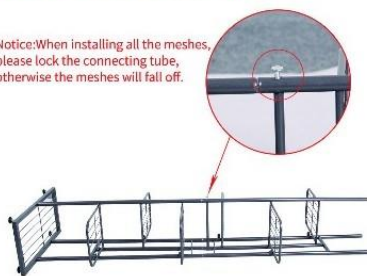

Step 3:

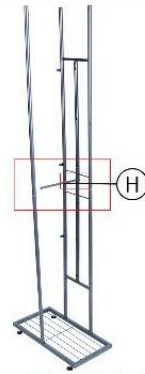











Tips:Only one side can be locked or the meshes cannot be installed.

Step 6:













## Flower Rack H918-1、H919-1 Instructions


### H918-1:

Ⓐ Bottom mesh	Ⓑ Bottom frame (with stamping necking)	Ⓒ Tube A (with stamping necking)	Ⓓ Upper frame	Ⓔ Tube B
				
X1	(630mm) X1	(630mm) X1	(630mm) X1	(630mm) X1
Ⓕ Above mesh	Ⓖ Mesh layer	Ⓗ Tube C	Ⓘ Anti-scratch foot pad	Ⓜ Screws
				
X1	X5	(188mm) X1	X4	X8

### H919-1:


Ⓐ Bottom mesh	Ⓑ Bottom frame (with stamping necking)	Ⓒ Tube A (with stamping necking)	Ⓓ Upper frame	Ⓔ Tube B
				
X1	(690mm) X1	(710mm) X1	(710mm) X1	(710mm) X1
Ⓕ Above mesh	Ⓖ Mesh layer	Ⓗ Tube C	Ⓘ Anti-scratch foot pad	Ⓜ Screws
				
X1	X6	(188mm) X1	X4	X8

### H918-1

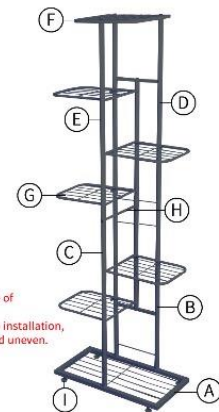

Tips:please note the difference of up and down pipe/meshes, if you mistake them during the installation, the meshes will be inclined and uneven.

### H919-1

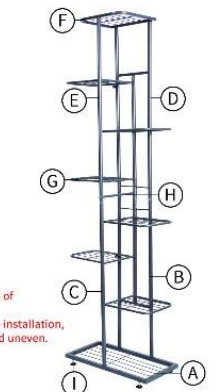

Tips:please note the difference of up and down pipe/meshes, if you mistake them during the installation, the meshes will be inclined and uneven.